




REI HOBITAT 6

SETUP INSTRUCTIONS



CHECK INSIDE THE TENT BAG FOR:

- Tent body and rainfly
- 1 pole-repair tube
- 6 poles (4 main, 2 door)
- Pole bag and stake bag
- 8 stakes
- 4 guylines with tighteners

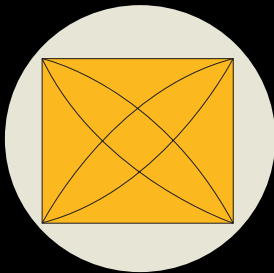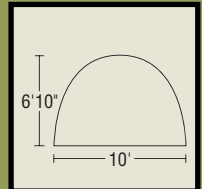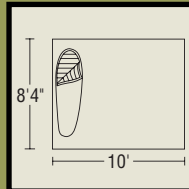


POLE ASSEMBLY

- *NOTE: Due to length of poles, use 2 people to pitch the tent.*
- Lay out tent; stake corners.
- Assemble 4 long poles, which combine thicker silver sections and thinner, more flexible orange sections. The poles are identical in length.
- Push poles through sleeves (in no particular order). Stop when a pole's tips are about equally far from tent center.
- Find the 8 clips attached to orange webbing. Clip each to a thinner (orange) pole section. (See center drawing.)



ORANGE TO ORANGE

- To raise tent, insert a pole tip into 1 grommet on a corner tab, then insert the pole's other tip into a grommet on the diagonally opposite corner tab. Each corner tab holds 2 tips.
- Slide rainfly over tent, REI logos facing out. Corner tabs of fly and tent should match colors (black or orange). At each corner, buckle fly to tent.
- To create awnings: Assemble 2 black door poles. Slide 1 pole through the sleeve above each door. Set tips into grommets in the webbing near the top of each door, arching the poles.

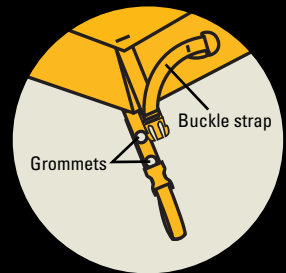

FLY ADJUSTMENT

- Secure fly by attaching hook-and-loop wraps on the fly's underside to the tent poles.
- Tension fly by tightening corner buckles. (See above.) To prevent puddling, open the zipper in the ceiling and raise the attached roof pole.
- To use extra guylines in wind: Tie free end of guyline to ring. (Black guyout rings are at each fly corner, hanging on a preattached orange cord.) Pull a loop of line out from guyline tightener; stake down and slide tightener toward the fly.

USE A CUSTOM-SIZE REI TENT FOOTPRINT

Available for most REI tents, these groundsheets protect floors from abrasion and punctures.

3 WAYS TO GET REPLACEMENT PARTS:

REI STORES • WWW.REI.COM • 1-800-426-4840

