

HOW TO



Adjust the strap length



Lengthen the strap

1. Pull the upper end of the strap loop to lengthen it
2. Pull simultaneously on both ends of the strap loop to fix the length

Shorten the strap

3. To tighten the strap, pull at the lower tail end of the strap
4. Pull simultaneously on both ends of the strap loop to fix the length