




REI SUB ALPINE



SETUP INSTRUCTIONS


CHECK INSIDE THE TENT BAG FOR:

- Tent body and rainfly
- 1 pole-repair tube
- 3 poles
- Pole bag and stake bag
- 8 stakes
- 3 guylines and 3 tighteners

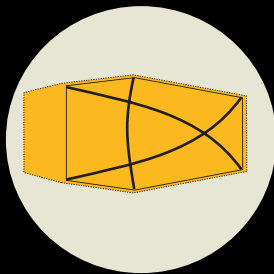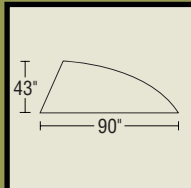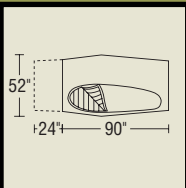

PITCHING THE TENT

- Lay out tent. If it's windy, stake down tent floor. Form an "X" with orange poles; flex each pole into an arch and set tips in orange corner-tab grommets. Place silver roof pole on top; set tips in black side-tab grommets.
- Secure each pole intersection with 1 twin-hook Strong-Arm clip: Raise clip until pole that crosses underneath is between the twin hooks; then-clip hooks to outer pole that crosses over the top.
- Starting at the peak, hook all remaining clips to poles.

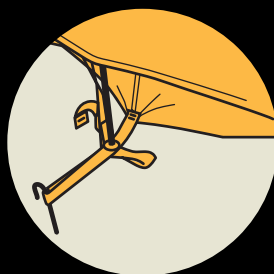

ATTACHING THE FLY

- Drape rainfly over tent so the vestibule is in front. On underside of fly, secure fly to poles by attaching a hook-and-loop wrap at each of the 3 pole intersections.
- At each corner, slip fly-tab grommet onto pole tip. Tighten all buckles (see above).
- You may move and stake down the tent. Stake each of vestibule's cord loops down. Pull cord end through cleat until taut; then wedge cord into the cleat's slot to "lock" in place (see above right).



ADJUSTMENTS

- In good weather, detach all tabs and wraps at the rear of the fly; roll it to the silver pole and hold using an elastic/toggle fastener on each side.
- Increase fly tension by tightening cords in cleats and buckle straps (see above and above center).
- Using extra guylines in wind:
 - 1) Tie free end of guylines to a guyout point on the fly.
 - 2) Pull a loop of line out from the tightener.
 - 3) Stake down the loop and slide tightener toward the fly (see above). Additional stakes sold separately.

USE A CUSTOM-SIZE REI TENT FOOTPRINT

Available for most REI tents, these groundsheets protect floors from abrasion and punctures.

3 WAYS TO GET REPLACEMENT PARTS:

REI STORES • WWW.REI.COM • 1-800-426-4840

