

## CIRQUE 2

**ALL-SEASON LIGHT TENT** 

## CHECK INSIDE THE TENT BAG FOR

- Tent body and rainfly
- Pole bag and stake bag
- 2 poles 6 stakes
- 4 guylines with tighteners





## SETUP INSTRUCTIONS

- 1. Lay out tent. (If it's windy out, stake down floor.)
- 2. Insert one pole's black end into pole sleeve and plug into grommet with black webbing. Repeat with other pole, forming 2 arches. (Fig. 1.)
- 3. Hook all clips onto poles.
- 4. If you didn't do so yet, you can stake the tent down for stability.
- 5. Drape rainfly over the tent so that the orange tabs on the fly and tent body align.
- 6. On the underside of the fly, attach hook-and-loop tabs to the pole sleeves.

- 7. Loosen buckles at all of the fly corners. Then slip each fly tab under a tent-pole tip and press the tab's grommet onto the tip. Retighten all buckles.
- 8. Stake each vestibule loop down and pull cord through cleat until taut; then wedge cord into the cleat's slot to "lock" in place (Fig. 2).
- 9. Tension fly by tightening buckles and/or vestibule cleats.

## TIPS:

Using extra guylines in wind: Tie free end of guyline to a guyout point on the fly. Pull a loop of line out from the tightener. Stake down the loop and slide tightener toward fly (Fig. 3). Additional stakes sold separately.

Increase ventilation by unzipping vents on the fly and the tent ceiling.

**POLE ASSEMBLY** 



LOCKING LINE IN CLEAT TIGHTENING GUYLINE



TO PROTECT YOUR TENT FLOOR, GET A CIRQUE 2 ASL FOOTPRINT.

3 WAYS TO GET REPLACEMENT PARTS: REI STORES • REI.COM • 1-800-426-4840



SATISFACTION GUARANTEED