


 
 
REI GEO MOUNTAIN 3

SETUP INSTRUCTIONS



CHECK INSIDE THE TENT BAG FOR:

- Tent body and rainfly
- 5 poles
- 11 stakes
- Gear attic (inside tent)
- 1 pole-repair tube
- Pole bag and stake bag
- 8 guylines with tighteners

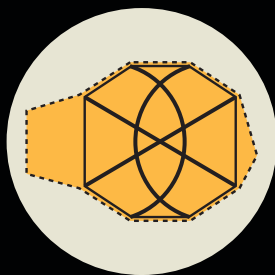

PITCHING THE TENT

- Lay out and tautly stake tent to ground. Slide 2 orange poles through the pole sleeves. Raise tent by setting pole tips into outer grommets on corner tabs.
- Insert the remaining orange poles crosswise through the pole-sleeve cutouts on each side of the tent: Each pole should pass just under the already raised poles.
- Bend poles so they cross on each side, then set their tips into grommets on the side tabs.
- Attach all clips to poles, with large clips securing pole intersections.



ATTACHING THE FLY

- Drape rainfly over the tent so that the orange tabs on the fly and tent body align.
- On underside of fly, attach hook-and-loop wraps at 6 pole intersections (at all but the topmost intersection).
- Set the tips of the silver pole into grommets on the side tabs near the door. Attach clips on the rainfly to this pole.
- At each main-pole tip, slip fly-tab grommet onto pole tip; then tighten all buckles (see above).
- Stake down vestibules via 1-rear and 2-front webbing loops, then tighten buckles.



ADJUSTMENTS

- The door stows in a pocket by the "hinge" on the side.
- In good weather, increase ventilation by unzipping the fly and rolling it up.
- If the tent body is too slack, move pole tips to inner grommets. Increase fly tension by tightening buckles (shown above and above center) at corners.
- Using extra guylines in wind:
 - 1) Tie free end of guylines to a guyout point on the fly.
 - 2) Pull a loop of line out from the tightener.
 - 3) Stake down the loop and slide tightener toward the fly (see above). Additional stakes sold separately.

3 WAYS TO GET REPLACEMENT PARTS:

REI STORES • WWW.REI.COM • 1-800-426-4840

