

 
 
CIRQUE 3 ASL

ALL-SEASON LIGHT TENT



CHECK INSIDE THE TENT BAG FOR

- Tent body and rainfly
- Pole bag and stake bag
- 2 poles
- 4 guylines with tighteners
- 6 stakes

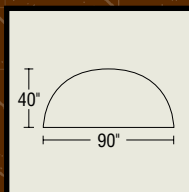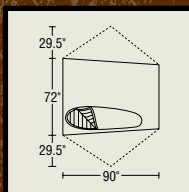

SETUP INSTRUCTIONS

1. Lay out tent. (If it's windy out, stake down floor.)
2. Insert long poles in pole sleeves. Plug all pole tips into grommets, forming 2 arches. (Fig. 1.)
3. Hook all clips onto poles.
4. If you didn't do so yet, you can stake the tent down for stability.
5. Drape rainfly over the tent so that the orange tabs on the fly and tent body align.
6. On the underside of the fly, attach hook-and-loop tabs to the pole sleeves.
7. Loosen buckles at all of the fly corners. Then slip each fly tab under a tent-pole tip and press the tab's grommet onto the tip. Retighten all buckles.
8. Stake each vestibule loop down and pull cord through cleat until taut; then wedge cord into the cleat's slot to "lock" in place (Fig. 2).
9. Tension fly by tightening buckles and/or vestibule cleats.

TIPS:

Using extra guylines in wind: Tie free end of guylines to a guyout point on the fly. Pull a loop of line out from the tightener. Stake down the loop and slide tightener toward fly (Fig. 3). Additional stakes sold separately.

Increase ventilation by unzipping vents on the fly and the tent ceiling.

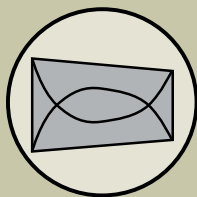 


FIG. 1
POLE ASSEMBLY

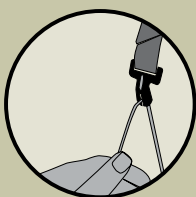 


FIG. 2
LOCKING LINE IN CLEAT

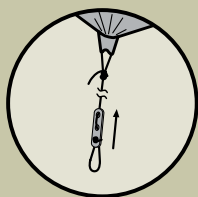 


FIG. 3
TIGHTENING GUYLINE

**TO PROTECT YOUR
TENT FLOOR, GET A
CIRQUE 3 ASL
FOOTPRINT.**

3 WAYS TO GET REPLACEMENT PARTS:
REI STORES • REI.COM • 1-800-426-4840



4 75333 60017 1

100% SATISFACTION GUARANTEED