




# REI MOUNTAIN 2

## SETUP INSTRUCTIONS




### CHECK INSIDE THE TENT BAG FOR:

- Tent body and rainfly
- Gear attic (inside tent)
- 3 poles + 1 pole/hub set
- Pole bag and repair tubes
- 12 stakes and stake bag
- 6 guylines with tighteners

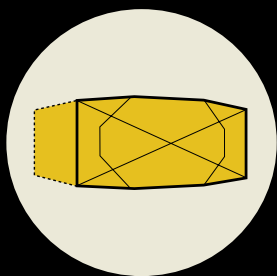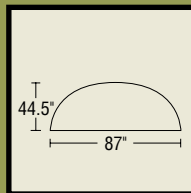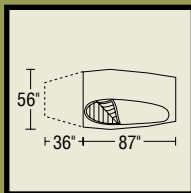


### PITCHING THE TENT

- Lay out and tautly stake down tent. Lay the orange poles with the hub on top of tent. Flat side of hub points up.
- Insert pole tips into grommets with orange webbing. Use middle grommet on front of tent; outer grommet on back.
- Raise tent. Clip the small hook on top of the tent into the hub.
- Plug silver pole's tips into silver side-tabs' outer grommets. (Pole goes outside orange poles.) Find the paired clips on 1 side; lift orange pole; clip to silver pole above and below orange pole. Repeat on other side.
- Plug black pole's tips into black side-tabs' outer grommets. (Pole goes outside orange poles.) Find the paired clips on 1 side; lift orange pole; clip to black pole above and below orange pole. Repeat on other side.
- Attach all pole clips to poles.

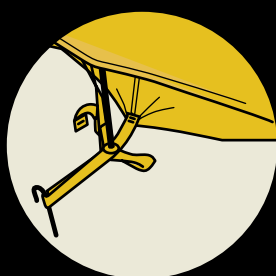

### ATTACHING THE FLY

- Drape rainfly over the tent so that orange tabs on the fly and tent body align. The front of the fly drapes over the end of the tent with 3 grommets on orange webbing tabs.
- Attach rip-and-stick wraps on the fly's underside to the poles.
- Set the tip of the silver pole into outer grommets on orange corner tabs near the door. Attach rainfly clips to this pole.
- At corner and side tabs, slip the rainfly's grommet onto pole tip; then tighten all buckles.
- Stake down vestibule via 2 front webbing loops, then tighten buckles.
- Snow flaps keep wind and snow out of vestibule; tie flaps together to create a vestibule floor.

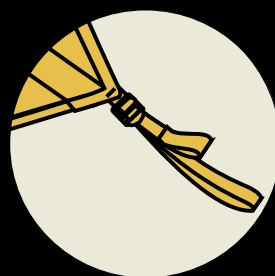

### ADJUSTMENTS

- The door stows in a pocket by the "hinge" on the side.
- Increase ventilation by unzipping the vent on the rainfly and the vent on the tent ceiling.
- If the tent body is slack, move pole tips to inner grommets. Increase fly tension by tightening buckles (see above) at corners.
- Using extra guylines in wind: Tie free end of guylines to a guyout point on the fly; pull a loop of line out from the tightener; stake down the loop and slide the tightener toward the fly.
- For camping on snow, use snow stakes (sold separately).

### 3 WAYS TO GET REPLACEMENT PARTS:

REI STORES • WWW.REI.COM • 1-800-426-4840

