





REI TAJ 3

SETUP INSTRUCTIONS

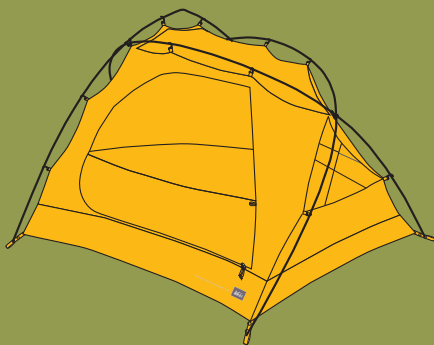

CHECK INSIDE THE TENT BAG FOR:

- Tent body and rainfly
- Pole-repair tube
- 3 poles
- Pole bag and stake bag
- 8 stakes
- 4 guylines with tighteners

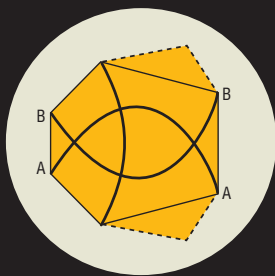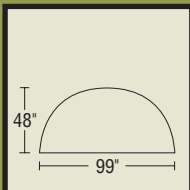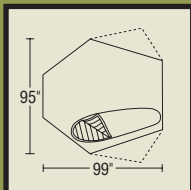


POLE ASSEMBLY

- Lay out tent. If it's windy, stake down floor. Form twin arches: Plug orange pole tips into outer grommets on orange tabs. Rotate arches inward (see A–A, B–B above) and lay them down.
- Plug silver pole's tips into side-tab outer grommets—one tab is black, the other is silver. (Legs must go outside orange poles.)
- Find the small paired clips on 1 side; lift orange pole; clip to silver pole above and below orange pole, securing intersection. Repeat on other side.
- Hook 1 big-clip pair onto each orange pole intersection (front and rear). Hook all other clips.



CORNER CONNECTION

- Drape rainfly over tent so window is between doors, and corner-tab colors on the fly and tent match.
- Attach rip-and-stick wraps on the underside of the fly to each pole (4 at pole intersections, 3 on silver pole and 2 on orange poles).
- Loosen buckles at all fly corners. Then slip each fly-tab under a tent-pole tip and press the tab's grommet onto the tip. Retighten buckles. (See illustration above.)
- If you didn't do it earlier, stake down the tent. Stake down and tighten each vestibule: Tautly pull cord through cleat and "lock" into cleat's slot. (See above right.)

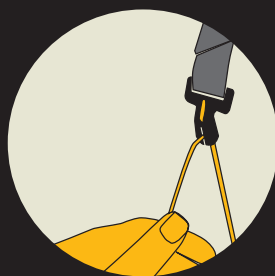

VESTIBULE CLEAT LOCK

- In good weather, detach all tabs and wraps at the rear of the fly; roll it to the silver pole and hold using an elastic/toggle fastener on each side.
- If the tent body is too slack, move pole tips to inner grommets. Increase fly tension by tightening buckles and cleat locks (shown above center and above).
- Using extra guylines in wind: Tie free end of guylines to a guyout point on the fly; pull a loop of line out from the tightener; stake down the loop and slide tightener toward the fly.

USE A CUSTOM-SIZE REI TENT FOOTPRINT

Available for most REI tents, these ground sheets protect floors from abrasion and punctures.

3 WAYS TO GET REPLACEMENT PARTS:

REI STORES • WWW.REI.COM • 1-800-426-4840

